

Daytime Running Lights

Notes

- Make sure to enable data logging and connect/backup to Google Drive
- 2018 Trucks need security bypass cable

Procedure



Key in RUN position

Open App


Connect to OBD II device

Select **DODGE RAM 1500** or **2500** or **3500**


Select **BODY COMPUTER > MY2013-17 (2018)> CONNECT**

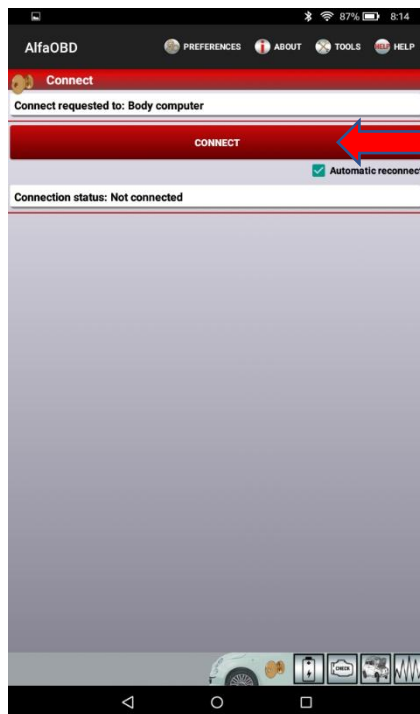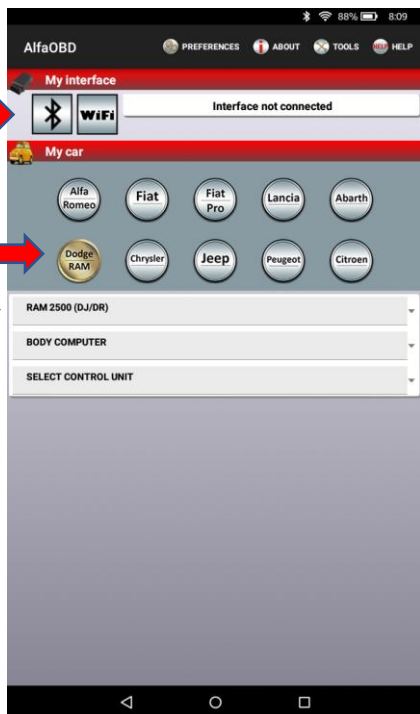



Click on the **CAR WITH THE OPEN HOOD**
Click on **PROCEDURE TO START**

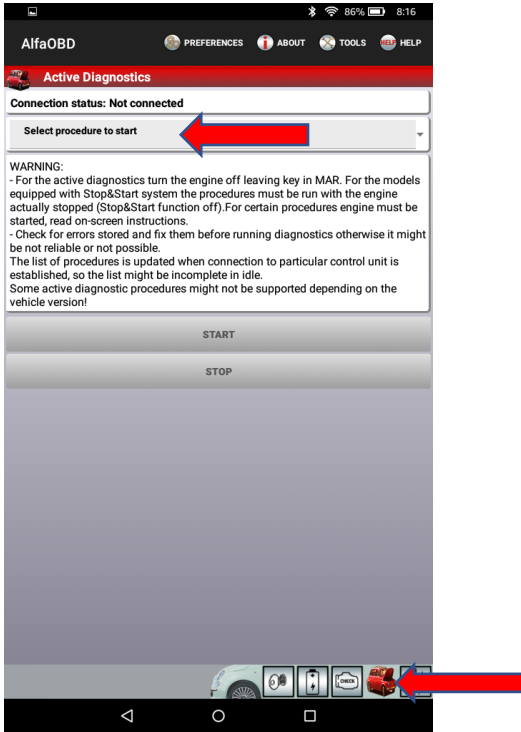


Select **PROGRAM CUSTOMER FEATURES**

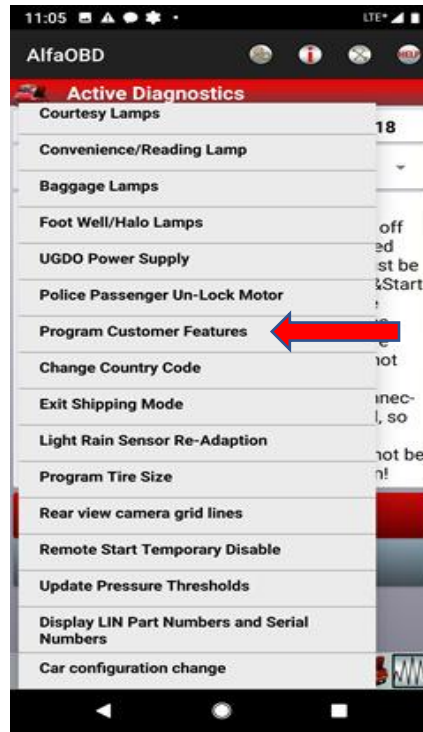


Select **PROGRAM CUSTOMER FEATURES** Select **DAY TIME RUNNING LIGHTS** > Select **ENABLE** > **START**

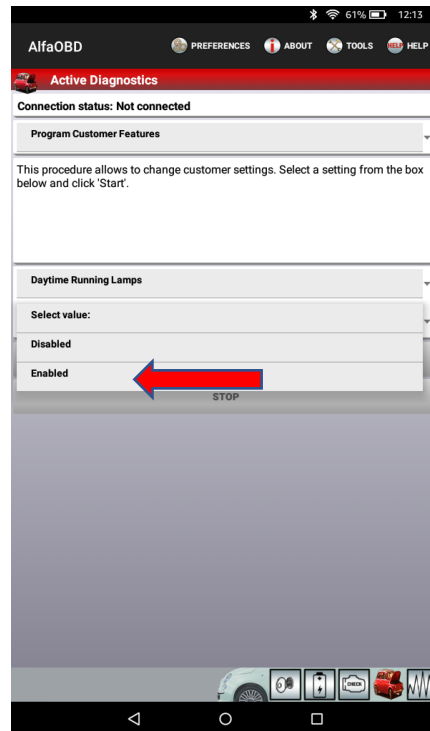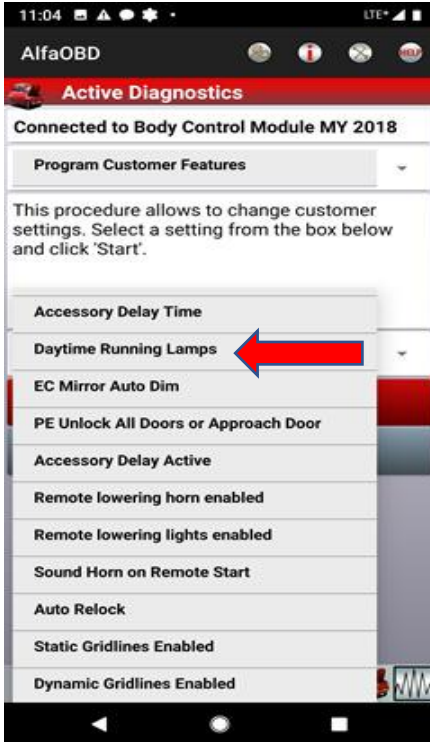



Click back on **PROGRAM CUSTOMER FEATURES**
Select **CAR CONFIGURATION CHANGE**

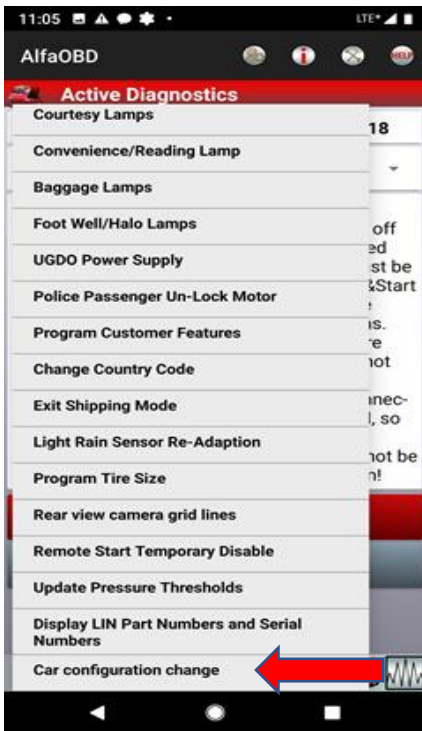

Click **SELECT OPTION**
Select **CBC FEATURES-DRL CONFIGURATION**


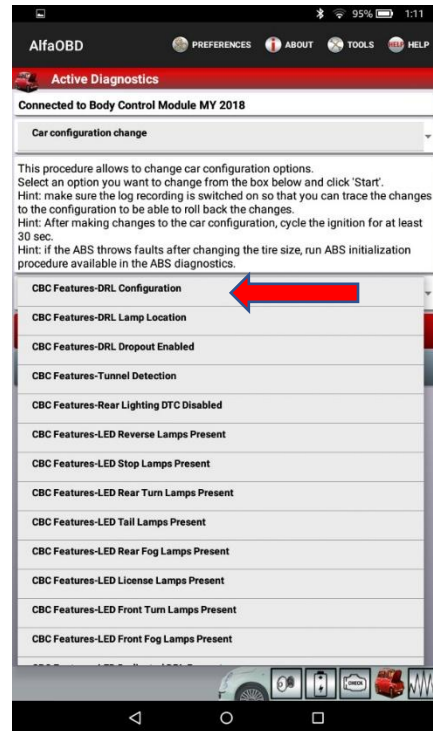


Click **SELECT VALUE** > Select **OPTIONAL DRL** > Select **OPTIONAL DRL**
Click on **CBC FEATURES-DRL CONFIGURATION** > Click **SELECT VALUE**
Select **CBC FEATURES-DRL LAMP LOCATION**
Select **LOCATION** > Click **START**

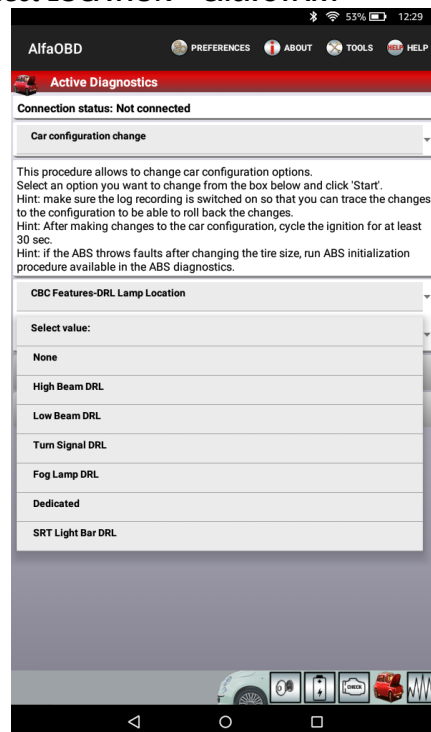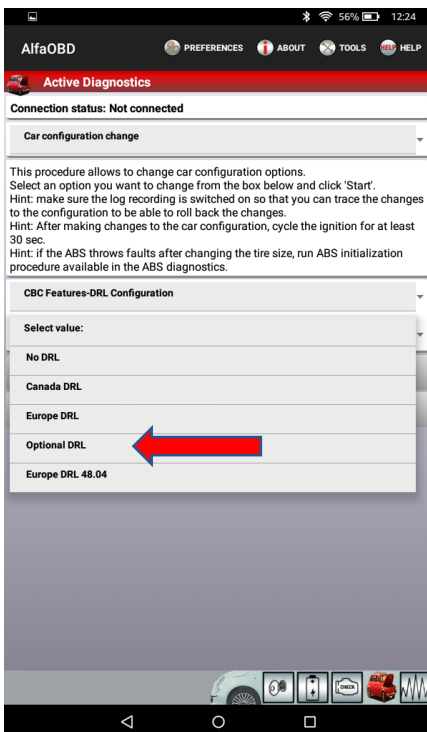

Click on **CBC FEATURES-DRL LAMP LOCATION** to bring menu back up

Select **CBC FEATURES-DRL DROPOUT** > Click **SELECT VALUE** > Select **YES** > Click **START** > **NEXT**

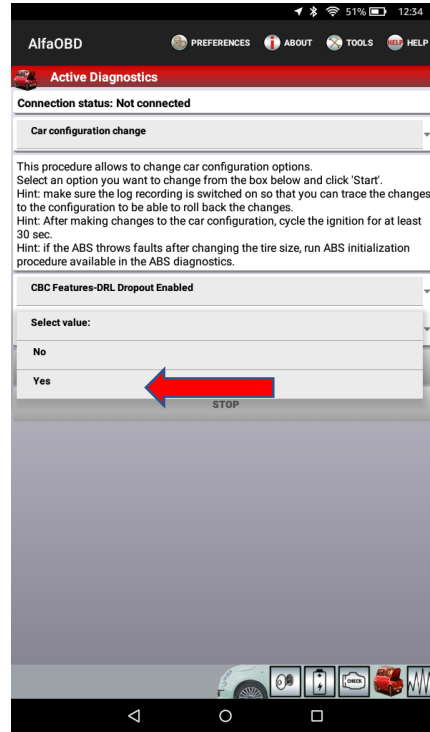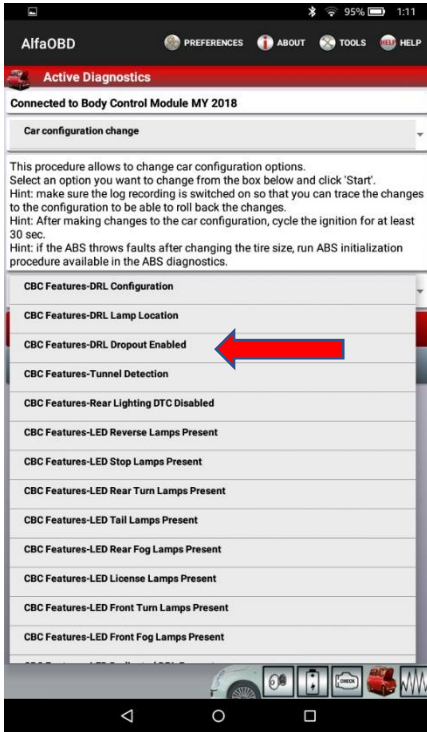

Exit AlphaOBD